

HANDING GUIDE FOR PDQ's MR 154, 158 AND 162 FUNCTIONS

DO NOT OPEN THE LOCK BODY. ALL HANDING CHANGES ARE MADE BY POSITIONING THE SUPPLIED SCREWS AND PARTS THAT ARE ACCESSED THROUGH THE EXTERIOR OF THE LOCK BODY.

NO ADDITIONAL PARTS ARE REQUIRED TO CHANGE THE HAND OF THIS LOCK BODY.

IF YOU ARE REVERSING THE SWING (LH TO LHR FOR EXAMPLE) ALL YOU NEED TO DO IS REVERSE THE LATCH BOLT HEAD.

* - APPLY PERMATEx'S LOCTITE 242 (BLUE), OR SIMILAR, TO THE LATCH BOLT HEAD SCREW.

