

HANDING GUIDE FOR PDQ's MR 115 AND 141 FUNCTION

DO NOT OPEN THE LOCK BODY. ALL HANDING CHANGES ARE MADE BY POSITIONING THE SUPPLIED SCREWS AND PARTS WHICH ARE ACCESSED THROUGH THE EXTERIOR OF THE LOCK BODY.

NO ADDITIONAL PARTS ARE REQUIRED TO CHANGE THE HAND OF THIS LOCK BODY.

IF YOU ARE REVERSING THE SWING (LH TO LHR FOR EXAMPLE) ALL YOU NEED TO DO IS REVERSE THE LATCH BOLT HEAD.

USE A THIN SCREWDRIVER TO DEPRESS THE SPRING LOADED LEVER INSIDE THIS SLOT.
SECURE THE LEVER IN THIS POSITION BY INSTALLING THE SECURITY SCREW.

EGRESS
SCREW
SEE NOTE 1

SECURITY
SCREW

LATCH BOLT
HEAD SCREW *

LATCH BOLT
HEAD

INSIDE



OUTSIDE

LEFT HAND (LH)

USE A THIN SCREWDRIVER TO DEPRESS THE SPRING LOADED LEVER INSIDE THIS SLOT.
SECURE THE LEVER IN THIS POSITION BY INSTALLING THE SECURITY SCREW.

 
SECURITY
SCREW

EGRESS
SCREW
SEE NOTE 1

LATCH BOLT
HEAD SCREW *

LATCH BOLT
HEAD

INSIDE



OUTSIDE

RIGHT HAND (RH)

USE A THIN SCREWDRIVER TO DEPRESS THE SPRING LOADED LEVER INSIDE THIS SLOT.
SECURE THE LEVER IN THIS POSITION BY INSTALLING THE SECURITY SCREW.

 
EGRESS
SCREW
SEE NOTE 1

SECURITY
SCREW

LATCH BOLT
HEAD SCREW *

LATCH BOLT
HEAD

INSIDE



OUTSIDE

LEFT HAND REVERSE (LHR)

USE A THIN SCREWDRIVER TO DEPRESS THE SPRING LOADED LEVER INSIDE THIS SLOT.
SECURE THE LEVER IN THIS POSITION BY INSTALLING THE SECURITY SCREW.

SECURITY
SCREW

EGRESS
SCREW
SEE NOTE 1

LATCH BOLT
HEAD SCREW *

LATCH BOLT
HEAD

INSIDE



OUTSIDE

RIGHT HAND REVERSE (RHR)

NOTES:

1 -EGRESS SCREW ONLY APPLIES TO 141
FUNCTION.

* - APPLY PERMATEx'S LOCTITE 242 (BLUE),
OR EQUIVALENT, TO THE LATCH BOLT HEAD
SCREW.