

KMS INSTALLATION INSTRUCTION


VIZPIN POWERED DEADBOLT



For Mechanical Concerns:
Phone: 866-874-3662
www.pdqlocks.com



For Electrical Concerns:
Email: Support@VIZpin.com
www.VIZpin.com

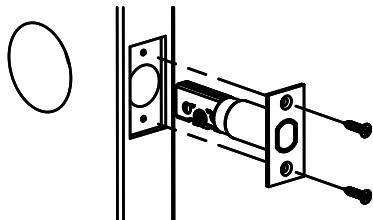

1. INSTALL LATCH



- Install latch with cross slot for tailpiece toward bottom.
- Secure with (2) combo screws.

2. INSTALL CYLINDER ASSEMBLY

- Install cylinder assembly from outside of door.
- If extended, retract deadbolt

Left Hand Door – Rotate tailpiece clockwise until it stops in the vertical orientation.

Right Hand Door – Rotate tailpiece counter-clockwise until it stops in the vertical orientation.

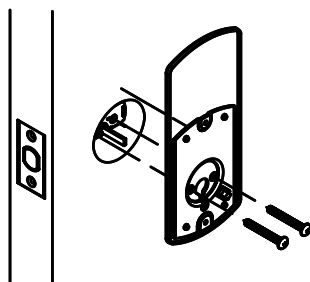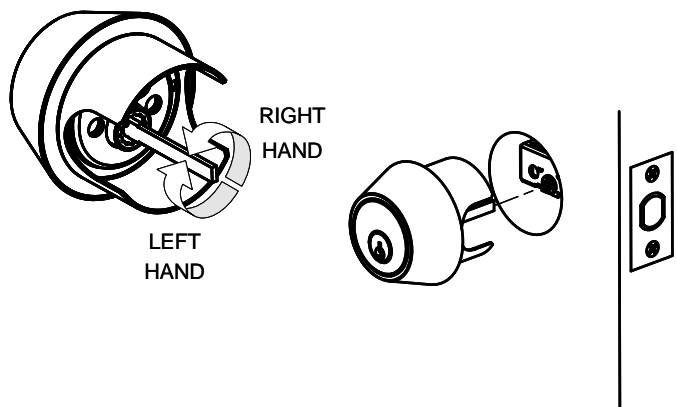


3. INSTALL GASKET & INSIDE MOUNTING PLATE

- Install rubber gasket and inside mounting plate
- Secure with (2) pan head screws.

4. CONFIGURE BOARD FOR DOOR HANDING



- For right hand doors, have the dip switch set to 8
- For left hand doors, have the dip switch set to 9

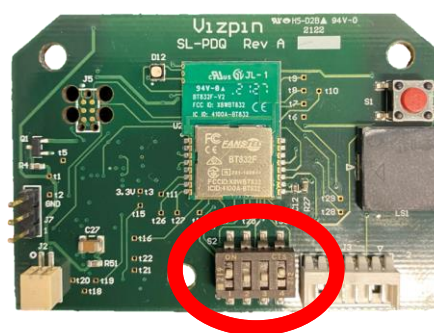

RIGHT HAND



LEFT HAND

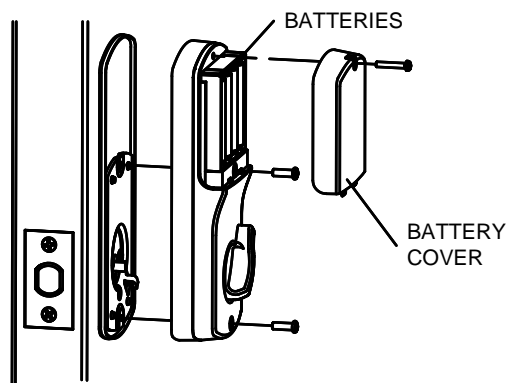

5. INSTALL INSIDE TRIM AND BATTERIES

- Align thumb turn with tailpiece
- Secure escutcheon with (2) short pan head screws.
- Install batteries and battery cover with pan head screw.