


# KMS INSTALLATION INSTRUCTION

## MOTORIZED DEADBOLT



Phone: 866-874-3662 | [www.pdqlocks.com](http://www.pdqlocks.com)

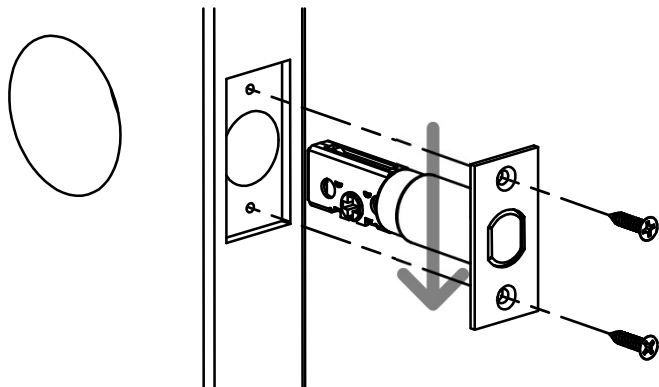

### 1. PREPARE DOOR & INSTALL LATCH


- Prepare door according to template.
- Retract deadbolt
- Install adjustable latch with cross slot for tailpiece toward bottom.
- Secure with (2) small combo screws.

### 2. INSTALL OUTSIDE TRIM ASSEMBLY

- Install escutcheon/chassis assembly from outside of door – feeding reader wire through chassis hole in door – under latch.

**Left Hand Door** – Rotate tailpiece clockwise until it stops in the vertical orientation.


**Right Hand Door** – Rotate tailpiece counter-clockwise until it stops in the vertical orientation.

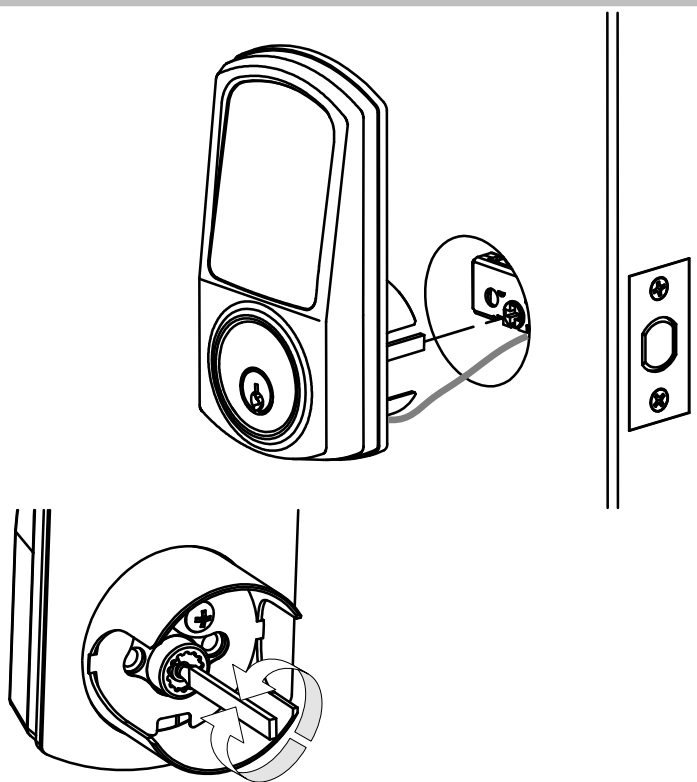

### 3. INSTALL GASKET & INSIDE MOUNTING PLATE

- Route wire through slot in bottom of gasket and mounting plate
- Install rubber gasket and inside mounting plate and secure with (2) pan head screws.

**CAUTION: DO NOT OVERTIGHTEN SCREWS**

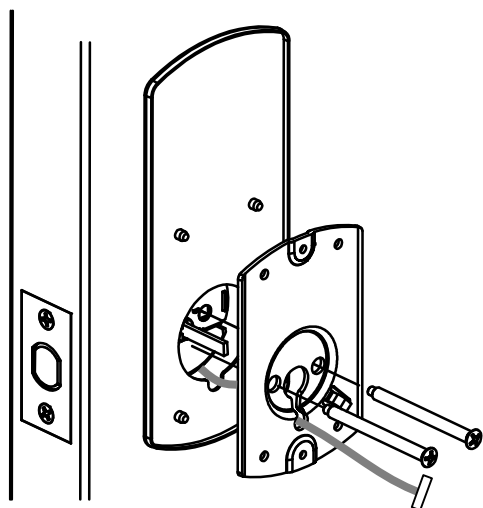

# KMS INSTALLATION INSTRUCTION



## MOTORIZED DEADBOLT



Phone: 866-874-3662 | [www.pdqlocks.com](http://www.pdqlocks.com)

### 4. INSTALL INSIDE TRIM AND BATTERIES

- Plug reader wire into socket on control board on back of escutcheon, route wire through hook in mounting plate as shown, install escutcheon onto door.
  - Take care to keep from pinching wire.
- Verify that thumb turn properly operates deadbolt latch smoothly.
- Secure escutcheon with (2) pan head screws.
- Install batteries and battery cover with pan head screw.

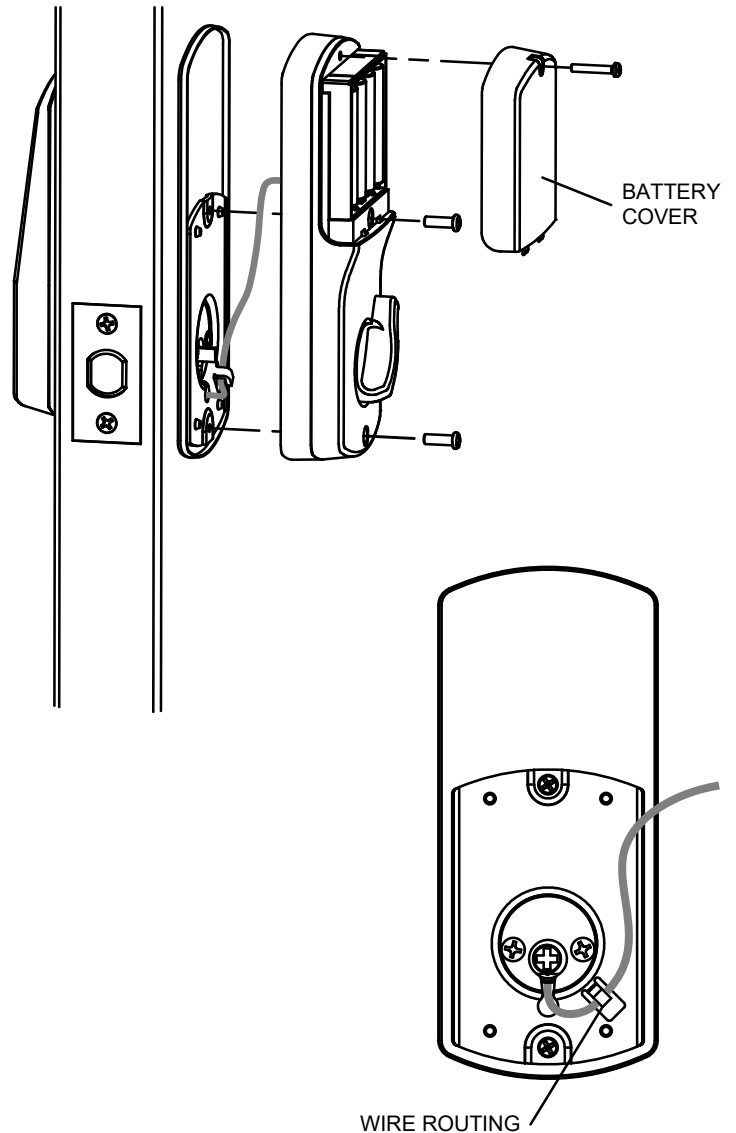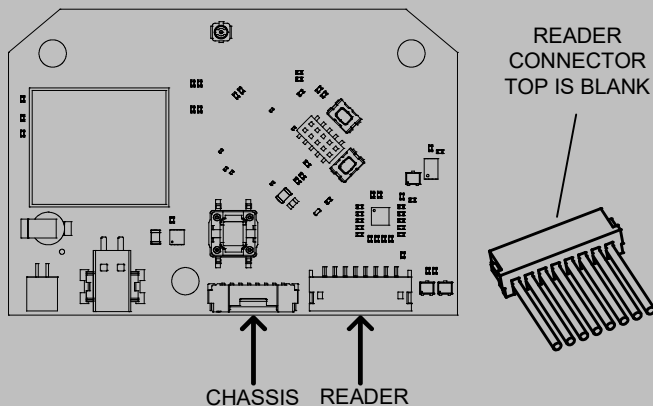

Scan QR Code to download  
the Spirit App.

