


INSTALLATION INSTRUCTIONS FOR EXIT DEVICE TRIM

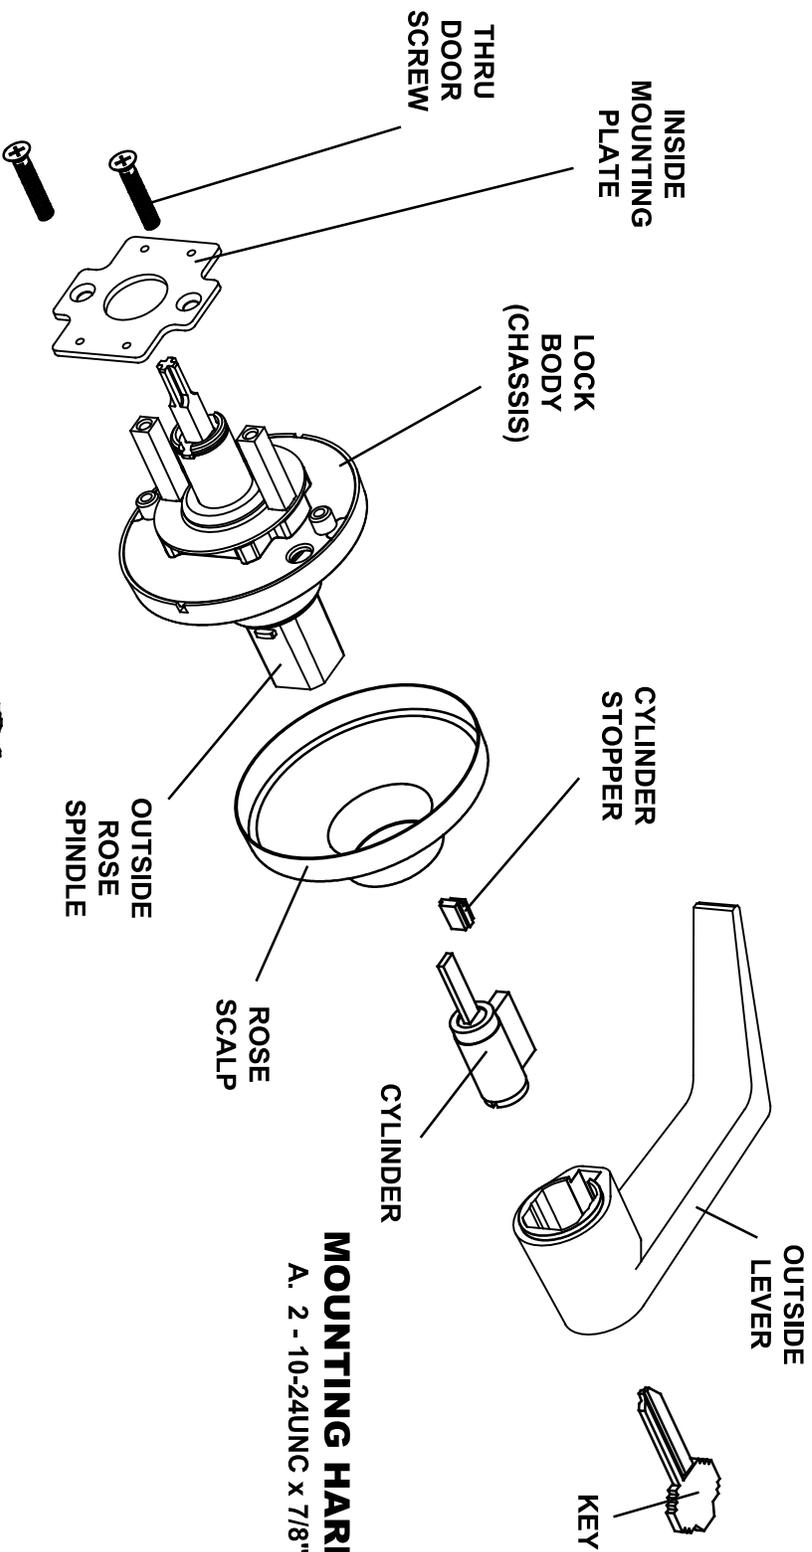


MOUNTING HARDWARE:

A. 2 - 10-24UNC x 7/8" FLAT HEAD

1. MARK DOOR

- A. Mark center point for 2-1/8" hole to match backset and height on template for exit device.
- B. Mark door for two 5/16" locating holes based on template located on the back side of this instruction sheet.

NOTE: Accurate door preparation is essential for proper function of this exit device trim.

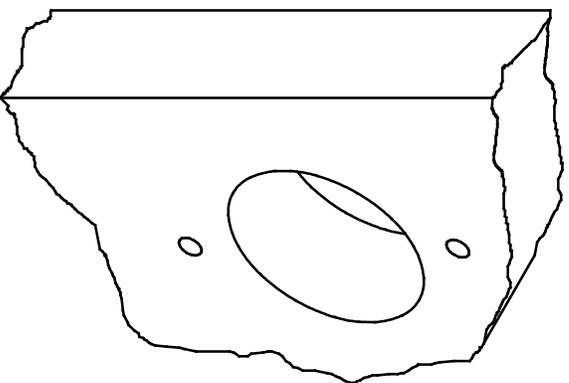

2. BORE HOLES (DOOR PREPARATION)

- A. Drill a 2 1/8" hole through door.
- B. Drill two 5/16" holes 1/2" deep on side of door where trim will mount.

NOTE: A fixture is recommended for drilling the 5/16" holes.

INSTRUCTIONS TO REKEY DEVICE TRIM

Does not apply to IC

TO REMOVE CYLINDER LEVER

- Insert key into lock and rotate 45° clockwise and hold.
- Depress retainer clip with pick provided (or other pointed tool).
- Pull lever off of lock.

TO REMOVE CYLINDER FROM LEVER


- Remove cylinder stopper.
- Slide cylinder out of lever.

TO INSTALL CYLINDER INTO LEVER

- Slide cylinder into lever.
- Install cylinder stopper.


TO INSTALL CYLINDER LEVER

- Slide lever down to lever retainer clip on spindle.
- Insert key into cylinder, rotate 45° clockwise and hold.
- Push in lever retainer clip and slide lever into locked position.

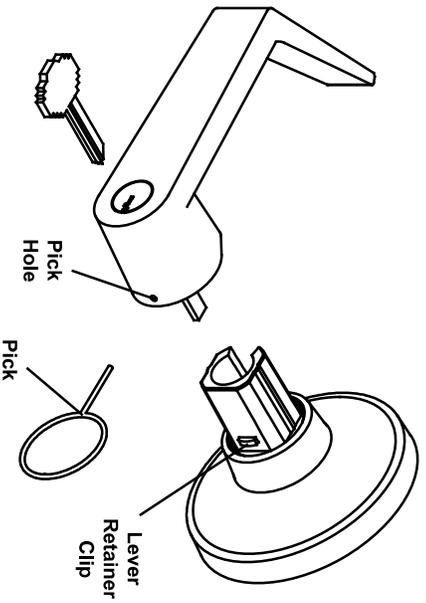

TOP

Note: Backset and Height determined by Exit Device Template

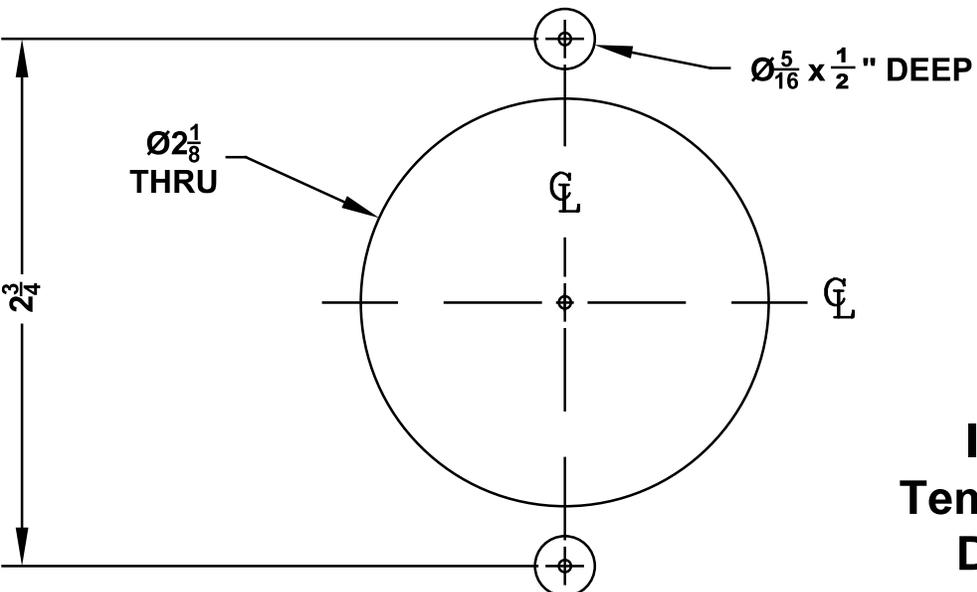

Installation
Template for Exit
Device Trim