
PULL SIDE FACE OF DOOR

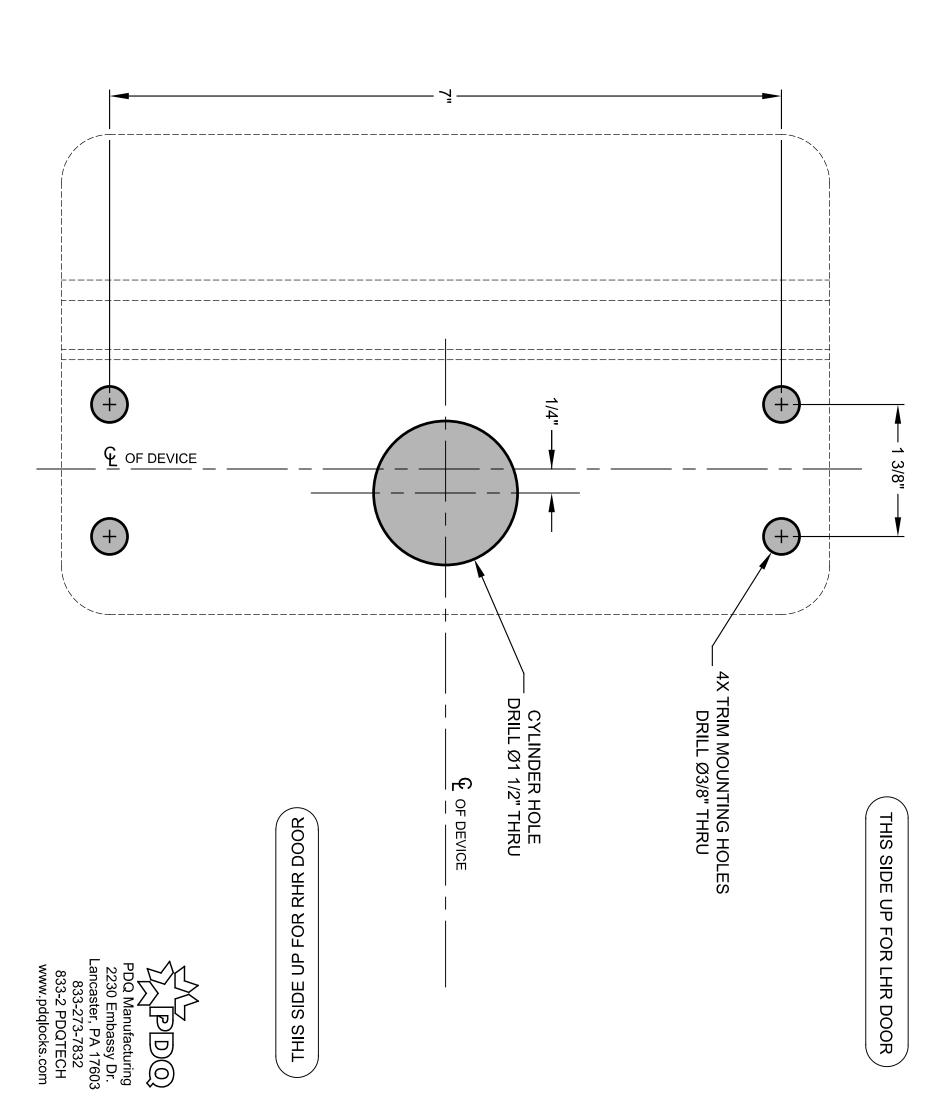

- NOTES:
- 1. VERIFY PRINTED TO SCALE
- 2. REFER TO EXIT DEVICE TEMPLATE FOR BACKSET/DEVICE CENTERLINE
- 3. INSTALL THEN SECURE RIM CYLINDER TO PULL PLATE PRIOR TO INSTALLATION
- 3. PLATE DIMENSIONS: 8" x 5" TOTAL TRIM PROJECTION: 1 3/16"
- 4. CHECK PDQ WEBSITE FOR MOST RECENT REVISION WWW.PDQLOCKS.COM